




**Molly&Cody**

**Automatic Pet Feeder**



**Molly&Cody**

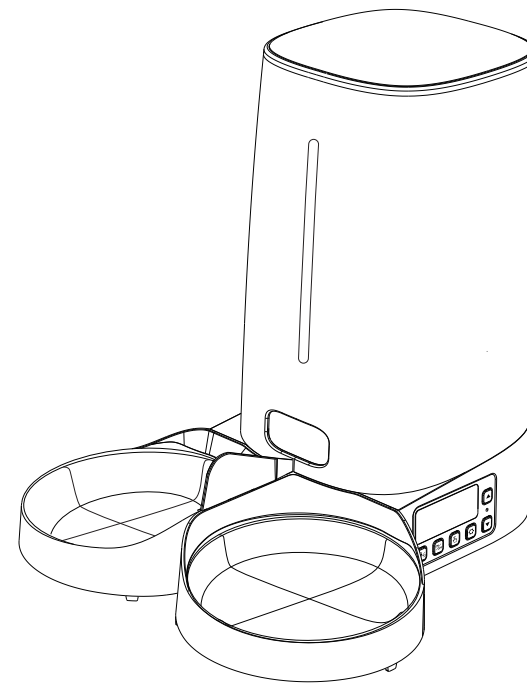

**User Guide**

Modell: FD12

[www.mollycody.com](http://www.mollycody.com)

**Contents**

---

Specifications ..... 1

Appliance Overview ..... 1

Package Contents ..... 2

Assembly ..... 2-4

Cleaning Instructions ..... 5

Operation Instructions ..... 6

Timer Setting ..... 6

Meal Setting ..... 7

Notes ..... 7

Troubleshooting ..... 8

## Specifications

Name of appliance: Automatic Pet Feeder

Model number: FD12

Colour: white+galvanised

Overall dimensions: 335\*330\*177mm

Capacity: 4L

Nettogewicht: 1330g

Packaging dimensions: 194.5\*194.5\*349.5mm

Gross weight: 1770g


Materials: ABS+SS304

Power supply: 5V DC/1A

Dry battery compatibility: 4\* AA batteries (not included)


## Appliance Overview

1. Lid
2. Desiccant Box
3. Visible Window
4. Food Chute
5. Stainless Steel Bowl
6. Plastic Bowl Holder
7. Lid Button
8. Main Body
9. Buttons
10. Display Screen
11. Dry Battery Compartment
12. Dismantling Switch
13. Bottom
14. Cable Compartment
15. Agitator

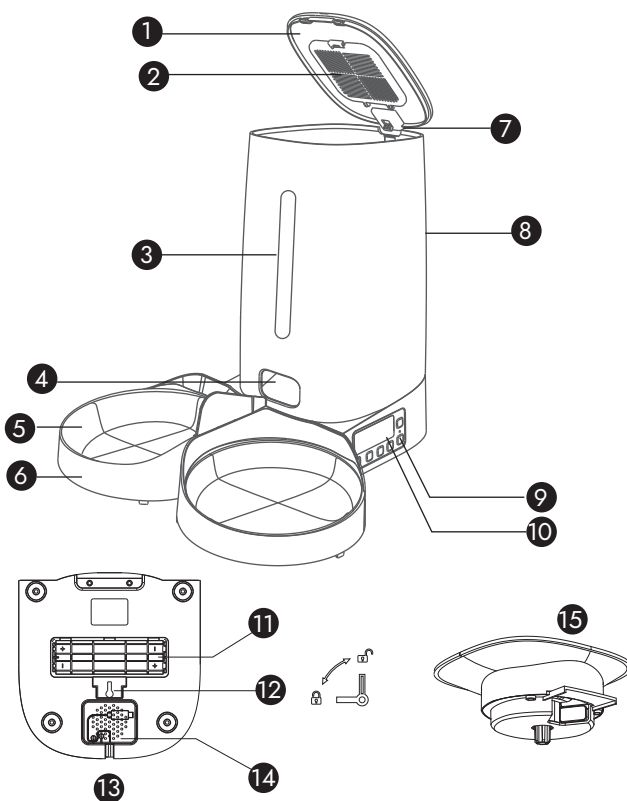

1

## Package Contents

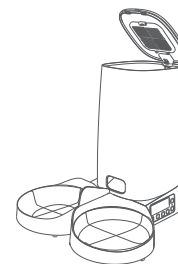

Main Body \*1



Double Bowl \*1



Power Cable \*1



Power Adapter\*1




User Manual \*1

## Assembly


1. Open the lid and add food

Press the button on the back to open the lid, and add food (suitable for kibbles with a diameter of 4-12mm).

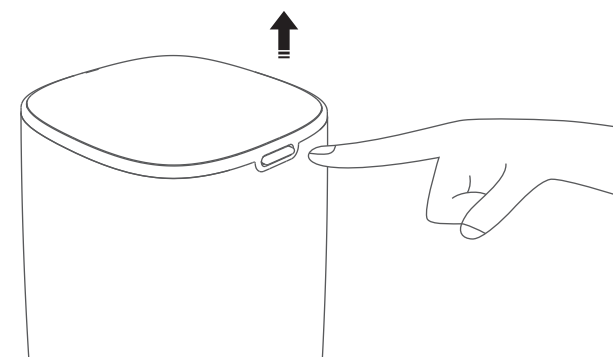


2


2. Place the desiccant  
Open the desiccant box and remove the packaging of the desiccant, then put the desiccant in place and cover it up.

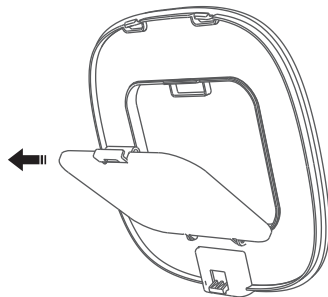

3. Place the bowls on a flat surface and fix the splitter into Bowl A as shown.

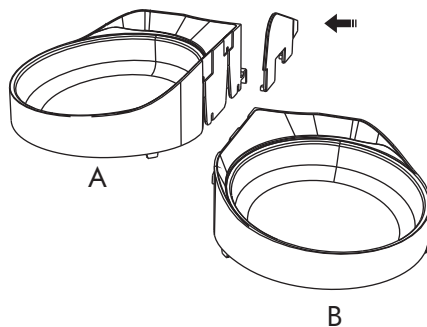


4. Fix Bowl B via the slot from bottom to top.

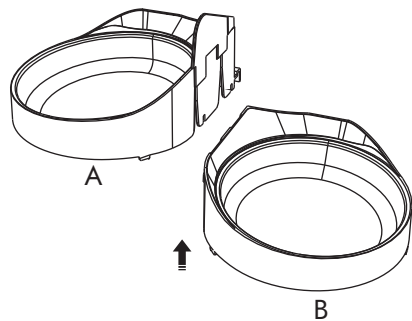


3


5. The assembly of the double bowl is completed.

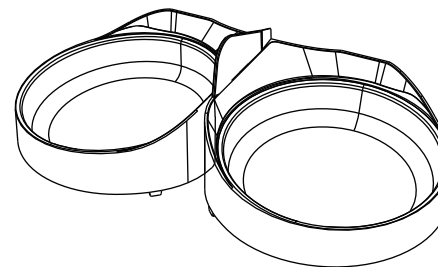

6. Fix bowls to the main body  
Place the bowls on a flat surface and place the main body downwards as shown.

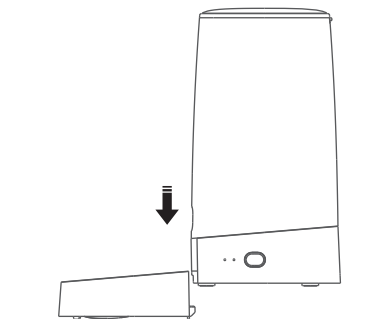


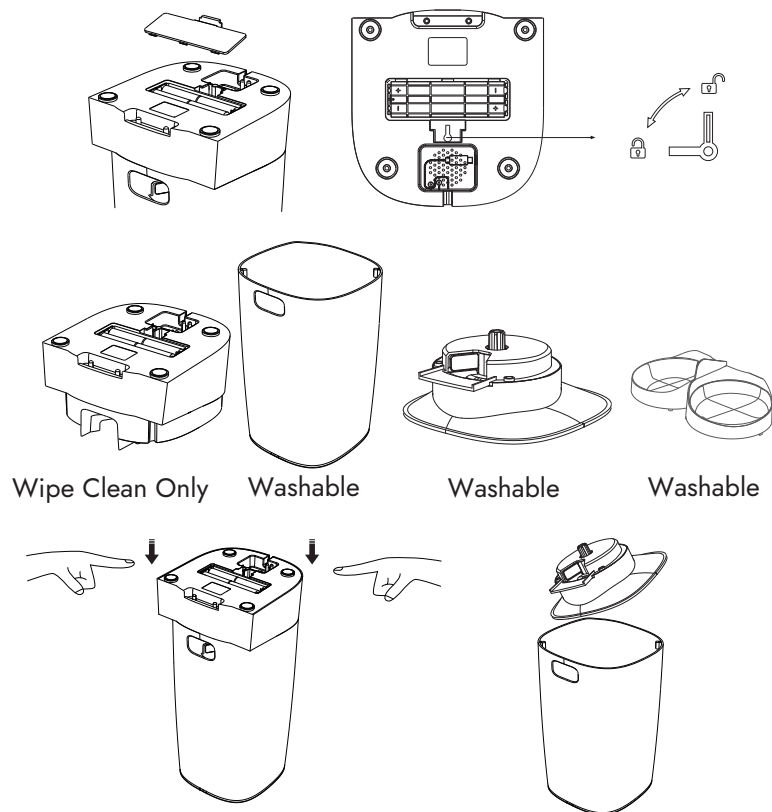
7. Connect to power supply  
Plug the power cable into the type-C charging port on the bottom of the main body.

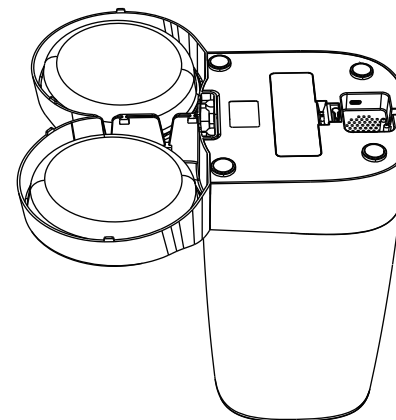


4

## Cleaning Instructions





- ✱ Disconnect the plug and power cable before cleaning.
- ✱ Open the lid, empty the hopper, place the appliance upside down, open the dry battery compartment and turn the dismantling switch to .
- ✱ Lift the base upwards to separate the hopper and the disassembly is completed. (The hopper and the agitator are washable while the base, non-washable, should be wiped clean with a damp or dry cloth.)
- ✱ After cleaning, turn the hopper upside down, tilt the agitator and put it into the hopper when the outlet aligns to the food chute of the base, then position the base in place via the corresponding slots at 4 corners.
- ✱ Turn the dismantling switch to  to secure the base to the hopper and cover the lid of the dry battery compartment.

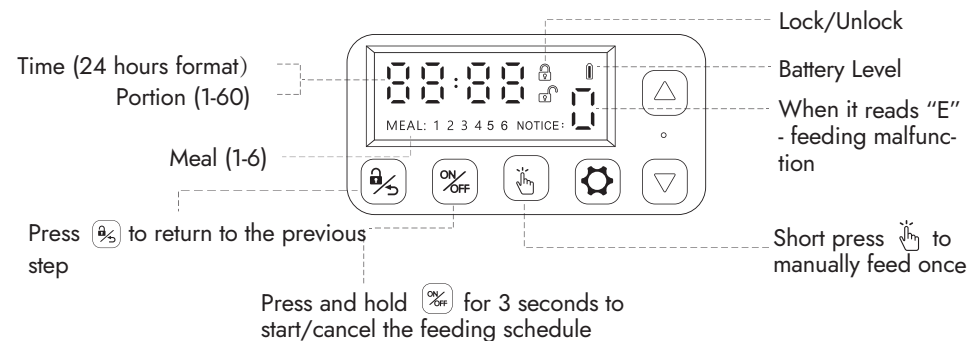


## Bedienungsanleitung




## Timer Setting

- ✱ Press and hold  for 3 seconds to unlock timer setting.
- ✱ Set timer as following.
- ✱ Press  to confirm and go to next step, press  or  to adjust.

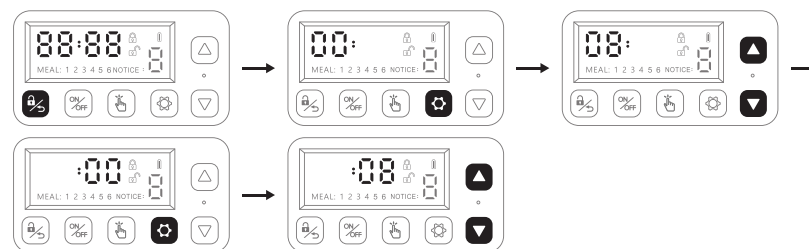


## Meal Setting

 
1. Press (⚙️) to set the feeding time of the 1st meal, press (▲) or (▼) to adjust.



 2. Press (⚙️) to set the feeding portion of the 1st meal, press (▲) or (▼) to adjust (1-60).



 3. Repeat the above steps to set the 2nd-6th meal if needed, press (⚙️) to confirm and finish setting or wait for 10 seconds to exit setting automatically.



## Notes

- ✖ Recommended for pets over 3 months of age.
- ✖ Recommended for indoor use. Keep the appliance away from direct sunlight and fire.
- ✖ Please use the original power adapter, otherwise it may cause damage to the appliance or malfunction.
- ✖ No immersing in water or rinsing.
- ✖ To prevent pets from pushing over the appliance, it is recommended to be used against a wall.
- ✖ Use by children: only under adult supervision.
- ✖ Please do not soak the desiccant in water. If there is any breakage, do not use.
- ✖ If moving or no longer using the appliance, please unplug it and remove the batteries from the bottom.
- ✖ Do not disassemble and repair the appliance except for maintenance personnel to avoid accidental injury.

## Troubleshooting

**A: Food does not come out, or kibbles get jammed, or there is lack of food.**

- ✖ Please check if there is enough food left.
- ✖ Please make sure it is dry food used. The appliance is applicable for dry food only.
- ✖ Please check if there is too much food piling up by the chute, in which case, decrease the feeding portions.
- ✖ If it's jammed, please clean out the hopper and make sure it's not jammed before attempting to use it again.

**B: It does not work after connecting to the power supply.**

- ✖ Please check if the plug is connected properly.
- ✖ Please check if the type C plug is reliably connected.
- ✖ Please check if the display screen illuminates normally.

## Certifications

### European Union Compliance Statement Battery recycling information for the European Union



Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC and amendment 2013/56/EU concerning batteries and accumulators and waste batteries and accumulators. The Directive determine the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union, This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC and amendment 2013/56/EU, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury, and Cd for cadmium).

Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances.

Before placing electrical and electronic equipment (EEE) in the waste collection stream or in waste collection facilities the end user of equipment containing batteries and/or accumulators must remove those batteries and accumulators for separate collection.

### Waste Electrical and Electronic Equipment (WEEE) Directive



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection

## Certifications

point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points

### Restriction of Hazardous Substances Directive (RoHS)

Beijing Junqi Technology Co., Ltd product, with Included parts (cables, cords, and so on) meets the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment ( "RoHS recast" or "RoHS 2")

### Radio and Telecommunications Terminal Equipment Directive



We, Beijing Junqi Technology Co., Ltd, hereby declare that this device corresponds to the basic requirements and relevant regulations outlined in guidelines 2014/53/EU, 2011/65/EU, 2014/30/EU, 2014/35/EU and 2009/125/EC.



### Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.